



**THE MOLE**  
RESORT

## COOKER INSTRUCTIONS

| 6.3 Heating functions |  | Heating function | Application   |
|-----------------------|--|------------------|---|
|                       | The oven is off.   |                  | To bake cakes with crispy bottom and to preserve food.  |
|                       | To turn on the lamp.   |                  | To defrost food (vegetables and fruit). The defrosting time depends on the amount and size of the frozen food.  |
|                       | To bake on up to three shelf positions at the same time and to dry food.<br>Set the temperature 20 - 40 °C lower than for Conventional Cooking.<br>To add humidity during the cooking. To get the right colour and crispy crust during baking. To give more juiciness during reheating.<br>Refer to "Care and cleaning" chapter for more information about: Aqua Cleaning. |                  | This function is designed to save energy during cooking. When you use this function, the temperature in the cavity may differ from the set temperature. The residual heat is used. The heating power may be reduced. For more information refer to "Daily Use" chapter, Notes on: Moist Baking. |
|                       | To bake pizza. To make intensive browning and a crispy bottom.   |                  | To grill thin pieces of food and to toast bread.  |
|                       | To bake and roast food on one shelf position.  |                  | To roast large meat joints or poultry with bones on one shelf position. To make gratins and to brown.   |

The lamp may turn off automatically at a temperature below 60 degrees during some oven functions.


The oven door should be closed during cooking so that the function is not interrupted, and the oven operates with the highest energy efficiency possible.

**PLEASE TURN OVER FOR DISHWASHER INSTRUCTIONS**



**THE MOLE**  
RESORT

## DISHWASHER INSTRUCTIONS

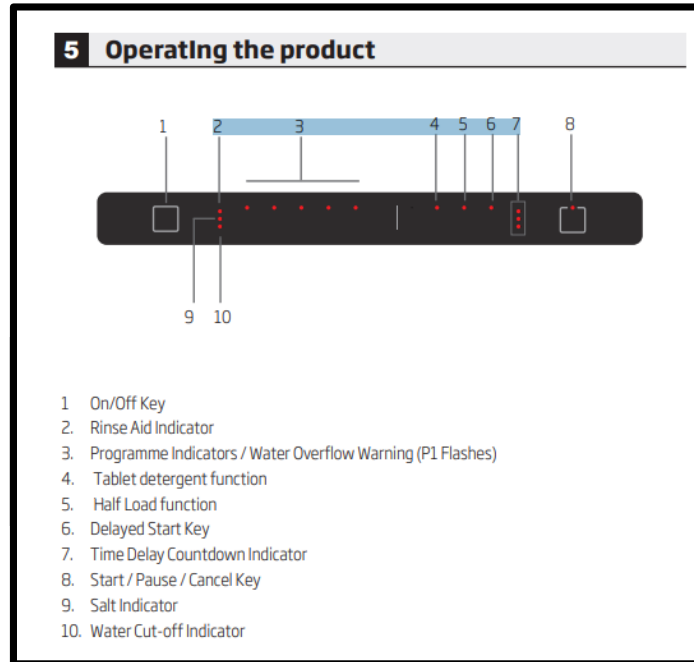

**On/Off key:** When you press the On/Off key, the product that is in the On position will switch on with the Eco programme.

**Programme Selection/Programme Cancel key:** Select the programme by pressing the desired programme key. Press the Start / Pause / Cancel key for 3 seconds to cancel the running programme.

**Function Keys:** If you press any of the Function keys during programme selection or time delay selection, the indicator of the function will flash if the programme you have selected supports the selected function. To cancel the selected function, press the function key again.

### Preparing the machine

1. Open the door of the dishwasher.
2. Place the dishes in accordance with the instructions in the user manual.
3. Make sure that the upper and lower impellers rotate freely.
4. Put adequate amount of detergent into the detergent dispenser.
5. Check if the Salt and Rinse Aid indicators light and add salt and/or rinse aid if needed.

### Programme selection

1. Press the On/Off button to turn on your machine.
2. Refer to the table of "Programme data and average consumption values" to determine a washing programme suitable for your dishes.
3. Selected programme will start when you close the door of your machine.