




THE MOLE
RESORT

HOB MANUAL

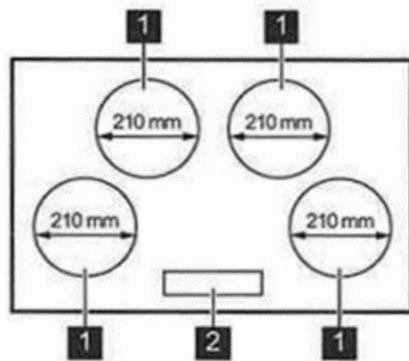

1: Induction cooking zone
2: Control panel

Meaning of the symbols and what they do:

Symbol	Description
ⓘ	To activate and deactivate the hob.
🔒	To lock / unlock the control panel.
	Pause. To set all cooking zones that operate to the lowest heat setting.
⌚	To select the cooking zone.
—⌚+	To increase or decrease the time.
🔌	Hob ² Hood. To connect the hob to a special hood.
P	PowerBoost. To activate and deactivate the maximum heat setting.
⓪	The cooking zone is deactivated.
Ⓛ . 14	The cooking zone operates. The display shows the current heat setting.
Ⓟ	The maximum heat setting is activated, PowerBoost operates.

PLEASE TURN OVER FOR FURTHER INFORMATION.



THE MOLE RESORT

CARE AND CLEANING

Please do not use steam cleaner and water sprays on the hob.

General information:

- Clean the hob after each use.
- Always use cookware with a clean base
- Scratches or dark stains on the surface have no effect on how the hob operates
- Use a special cleaner suitable for the surface of the hob
- Use a special scraper for the glass

Cleaning the hob:

- **Remove immediately:** melted plastic, plastic foil, sugar and food with sugar, otherwise, the dirt can cause damage to the hob.
- Take care to avoid burns
- Use a special hob scraper on the glass surface at an acute angle and move the blade on the surface.
- **When the hob is sufficiently cool:** Remove limescale rings, water rings, fat stains, shiny metallic discolouration. Clean the hob with a moist cloth and a non-abrasive detergent. After cleaning, wipe the hob dry with a soft cloth.
- **Remove shiny metallic discolouration:** use a solution of water with vinegar and clean the glass surface with a cloth.

TROUBLESHOOTING



If you cannot find a solution to the problem below, check the full version of user manual online or contact an Authorised Service Centre, if necessary.

Problem	Possible cause	Remedy
You cannot activate or operate the hob.	The hob is not connected to an electrical supply or it is connected incorrectly.	Check if the hob is correctly connected to the electrical supply.
	The fuse is blown.	Make sure that the fuse is the cause of the malfunction. If the fuse is blown again and again, contact a qualified electrician.
An acoustic signal sounds and the hob deactivates. An acoustic signal sounds when the hob is deactivated.	You do not set the heat setting for 10 seconds.	Activate the hob again and set the heat setting in less than 10 seconds.
	You touched 2 or more sensor fields at the same time.	Touch only one sensor field.
	There is water or fat stains on the control panel.	Clean the control panel.
Hob [®] Hood does not work.	You put something on one or more sensor fields.	Remove the object from the sensor fields.
	You use a very tall pot which blocks the signal.	Use a smaller pot, change the cooking zone or operate the hood manually.



THE MOLE
RESORT

WASHER DRYER

The washer-dryer should work much like you one at home, but we appreciate that each machine is slightly different, so we have included some information for you below to help you if you need it.

Meaning of the symbols and what they do:



Laundry type	Weight (g)	Laundry type	Weight (g)
Bathrobe	1200	Hand towel	100
Fabric napkin	100	Women's night gown	200
Bed sheet	700	Underclothing	100
Bed sheet	500	Men's overalls	600
Pillowcase	200	Men's shirt	200
Tablecloth	250	Men's pyjamas	500
Towel	200	Blouses	100